































# 7-Series Front Panel Button Shortcuts

Function	Key Sequence	Action
Record Tone	 + 	In the menu File: Marker Mode must be set to Markers Disabled. While recording hold the REC button and press the tone button. Tone will be active as long as the tone button is held.
Jam Menu	 + 	Enters the time code Jam Menu. (702T & 744T only)
Button Lock	 + 	Press Backlight then Tone to lock all front panel buttons except for Record, Stop and Play. FF and Rew are available in playback mode. Use Backlight and Tone again to unlock the panel.
Input Mutes		Hold down and press soft buttons to mute inputs.
Input Routing	 + 	Hold down STOP and press INPUT to cycle through input routing presets. Last preset will open the input routing menu to the custom route selection.
Phantom #1	 + 	Toggles Input 1 Phantom Power. Phantom 1 & 2 are linked when Inputs 1 & 2 are linked.
Phantom #2	 + 	Toggles Input 2 Phantom Power.

Function	Key Sequence	Action
Low-cut #1	 + 	Toggles Input 1 high-pass filter. Low-cuts 1 & 2 are linked when Inputs 1 & 2 are linked.
Low-cut #2	 + 	Toggles Input 2 high-pass filter.
Connect FireWire	 + 	Initiates FireWire connection.
False Take	 + 	Delete last take prompt.
Increase Take	 + 	Increments take number to be recorded for the next file.
Take List	 + 	Take list and circle take identifying screen.
Toggle Drives		Hold the HDD button for 1 second to toggle viewable drives.
LED Level	 + Rotary Switch	Adjusts levels of LED brightness.
Flashlight Mode	 +  + 	With the power off, hold down these buttons while powering the unit to enter Flashlight mode. This illuminates all LEDs except for three. Press power again to exit.